



Care & Cleaning Guide

GEBE offers a carefree outdoor living experience. To clean and take care of your furniture use the following instructions:

Wicker Care and Cleaning

Our All-Weather wicker is made of superior strength, high-density polyethylene. Each fiber is created using a proprietary color blend that gives it rich visual depth. This high-performance material is hand woven in a variety of artistic patterns, over an aluminum frame. Some of the woven patterns on sofas and chairs can take our artisan several days to complete. This material is UV and mildew resistant and has been tested to maintain its color and to withstand cracking for up to five years.

- Wipe down with a slightly damp cloth or dry cloth to remove dirt.
- Use soft paint brush to remove dirt from the furniture. If its extra dirty, mix mild soap with water and use a sponge before rinsing with cold water.
- Do not use any abrasive product on weaving.
- Never scrub the wicker with a wire or hard brush.
- Alcohol and other solvents are not recommended for cleaning.
- Avoid furniture contact with sharp objects, it may cut the wicker.
- Do not mishandle the furniture, avoid impact, rough handling.

Assured 5 years of warranty

Rope Care and Cleaning

Our rope is designed with multifilament yarns artfully woven or wrapped in unique, dimensional patterns that give our furniture its distinct look. They are made from durable, solution dyed Olefin, Polyester and PVC yarns. This fiber is UV, mold and mildew resistant.

- Wipe down with a slightly damp cloth or dry cloth to remove dirt.
- Use soft paint brush to remove dirt from the furniture. If its extra dirty, mix mild soap with water and use a sponge before rinsing with cold water.
- Do not use any abrasive product on weaving.
- Never scrub the wicker with a hard brush.
- Alcohol and other solvents are not recommended for cleaning.
- Avoid furniture contact with sharp objects, it may cut the wicker.
- Do not mishandle the furniture, avoid impact, rough handling.

Assured 3 years of warranty

Upholstery Care & Cleaning

GEBE upholstered furniture is crafted for many years of comfort and performance. To help keep your upholstery looking new, certain precautions and cleaning instructions should be followed. The quicker you clean spills and stains, the easier they can be to remove.

- All cushions and covers are washable.
- First wipe down with a damp cloth to clean dirt and dust.
- Spray a mild cleaning solution of soap (such as Dawn or Woo lite) and water.
- Rinse the fabric thoroughly to remove all soap residue followed by air dry.
- When cleaning upholstered pieces, clean the entire surface area of the fabric, from seam to seam, instead of rubbing the fabric in a circular motion on the stain.
- Its essential that all cushions are completely dry before storing in a well-ventilated area over the winter season.
- In rainy days, place the cushion in standing position that would make the minimum impact on the fabric.

General Care:

Glass is fragile, and care must be taken to avoid chipping or damaging.

Do not leave decorative pieces or sharp objects on glass surfaces for extended periods as marking can occur.

Use furniture protection covers to protect the furniture when not in use. Before covering, please ensure the furniture is clean and dry.

Don't use abrasive brush on aluminum frames.

Wooden goods care and cleaning

We use IPE Wood coated with epoxy and water based solutions that accentuate the look and feel of the wood while also contributing protective properties that add to the furniture's overall durability and strength and expands and contracts according to the weather. Caring for outdoor wooden furniture is important to maintain its appearance and extend its lifespan. Here are some tips to help you care for your outdoor wooden furniture

- **Clean Regularly:** Dirt, dust, and debris can build up on wooden furniture and cause it to deteriorate over time.
- **Regularly clean the furniture** using a soft brush or cloth and a mild soap solution. Rinse thoroughly with clean water and allow the furniture to dry completely.
- **Keep it Covered:** When not in use, cover your outdoor wooden furniture with a protective cover to keep it clean and dry. This is especially important during the off-season or when heavy rain or snow is expected.
- **Avoid Harsh Chemicals:** Avoid using harsh chemicals or solvents on outdoor wooden furniture, as they can damage the wood and finish. Stick to mild soap and water, or use a specially formulated wood cleaner.
- **Sand and Refinish:** Over time, outdoor wooden furniture may become weathered or discolored. If this happens, consider sanding and refinishing the furniture to restore its appearance. Be sure to follow the manufacturer's instructions for sanding and refinishing.

Outdoor Rug Care and Cleaning

- **Shake & Vacuum Regularly**– Remove dust, dirt, and debris.
- **Spot Clean Spills Immediately**– Blot with a clean cloth; avoid rubbing.
- **Use Mild Soap & Water**– Scrub gently and rinse thoroughly.
- **Prevent Mold & Mildew** – Dry completely in sunlight after washing.
- **Rotate & Use a Rug Pad**– Prevent uneven wear and moisture buildup.
- **Store in Harsh Weather** – Roll up and keep indoors during extreme conditions.

Regular care extends durability and keeps your rug looking fresh!

By following these tips, you can keep your outdoor wooden furniture looking beautiful for years to come.